

**SYLVANIA**

4GB  
MP4 Player  
SMPK4000



## User Manual

**SYLVANIA**

IMPORTED BY / IMPORTÉE PAR:  
C.I. LTD. TORONTO, ONT. M9W 5C1.

## Tips:

### Touch panel calibration

1. Click setting icon in the main menu and then choose Calibration of system setting submenu.
2. To tap the center of the "Cross" indicated by the red circle until calibration is finished.

## In the box




Music & Video Player



User Manual



Headphones

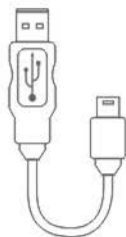

USB Cable

## Location of controls




1. **[POWER]** Power on-off / Main Menu / Shutter
2. Mini USB port
3. Headphone jack
4. Touch screen lock
5. Touch Screen Display

6. Camera Lens
7. Speaker
8. Micro SD card slot
9. Microphone
10. RESET button

# Basic operation

## Charging:

1. Connect the player to your computer using the included USB cable.
2. Charge the battery between 3-5 hours (do not charge for more than 8 hours).

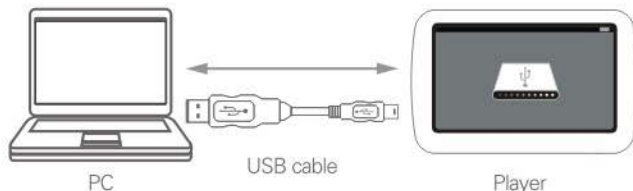

## Turning on/off:

Make sure the player is fully charged before turning it on.


- To turn the payer ON, press and HOLD the **[POWER]** button for two seconds then release (this is called a longpress).



- To turn the player OFF, longpress the **[POWER]** button.

## Screen lock:

To lock the touch screen, move the touch screen lock to the UP position. A lock will appear on the screen. This is especially useful so you do not accidentally press touch screen functions unintentionally.



## Resetting the player:

If the player malfunctions or freezes, you can use the reset function to restart it.

- To reset the player, take a metal pin (such as the end of a paperclip), and gently push it into the RESET hole to restart the player.




- Be sure not to confuse the reset hole with the microphone.



To return to the Main Menu at any time, quick press the **[POWER]** button (this feature works in every mode except for camera mode where the **[POWER]** button becomes the shutter button).

# Transferring media files to the player

1. Find music, picture, or video files on your computer.

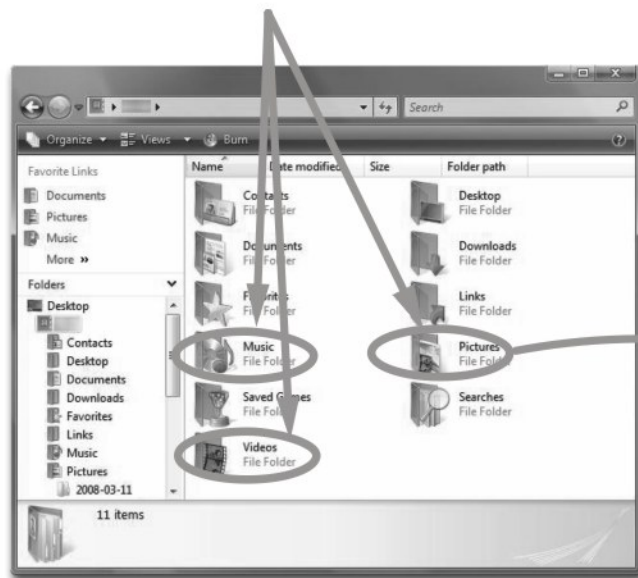

**i** It is also possible to delete files on the player while connected to the computer. Select the file and press the delete key of the computer's keyboard.

2. Connect the player to the computer, and locate "MP3".
3. Drag the files as shown below (do not drag the files into the "RECORD" folder).





*To avoid data loss or damage to the player, always perform a safe USB extraction before disconnecting the player from the computer.*

\*Screenshots above may be slightly different than your computer's operating system.

## Inserting the Micro SD card

The player supports Micro SD cards (not included), which allow you to add up to 16 GB of additional memory to the player.

### To insert the Micro SD card:

1. Insert the Micro SD card into the card slot with the metal contacts facing towards the back of the player, and gently push it in until it clicks. Do not apply excessive force, as this may damage the player and Micro SD card.
2. To view files on your Micro SD card, select "Explorer", from the main menu and select "SD Card".
3. To remove the Micro SD card, gently push it in until it pops out.



- Make sure the player is turned off before inserting or taking out the card.
- Do not use force while inserting or removing the Micro SD card.
- Do not remove the card during file transfers.

**Note:** To access the main menu at any time, quick press the [POWER] button.

# Main Menu

After turning on the player, the Main Menu appears. Use the touch button icons to control the player and make selections.

Main Menu



1. Sliding the screen and touch the button. selection to open it.

## Interface icon description

1. Play background music icon:



Play/Pause, Backward/Forward.

2. Battery icon:




Show the current battery power plant.

3. Backlight adjustment icon



Interface is used to adjust the screen bright and dark level (arrow to increase light, down arrow to the dark)

4. Search icon



Enter the file name can quickly find all files save in the machine.

5. Background changer icon



Direct press the icon to quickly change the background.


6. Hide Article



Floating icon can be pulled to hide the interface hidden in Article. Hold down the middle of the icon screen does not move, so it can move, you can pull it into the Hide Article.


# Music

1. To listen to music or voice memo files, select "music" from the Main Menu.
2. Select "All Music", "Artist", "Album", "Genres", "Favorites", "Voice Memos", "Music Browser" or "Update".
3. Use the [ ↑ ] or [ ↓ ] button to highlight a music file and touch the highlighted file or double tap the file, the Now Playing screen appears.
4. Use the [ ↶ back ] button to go to previous screens or return to the Main Menu.

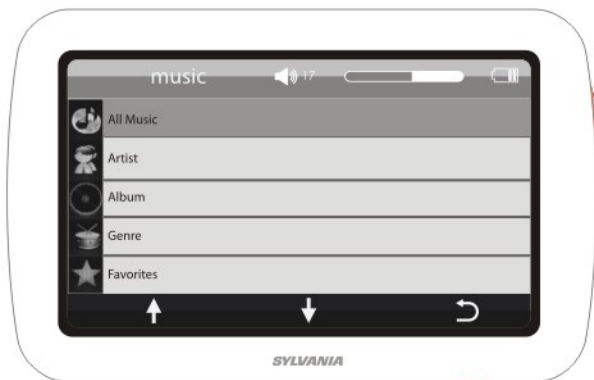

**Note:** To access the main menu at any time, quick press the [POWER] button.

## Now Playing Screen (music)

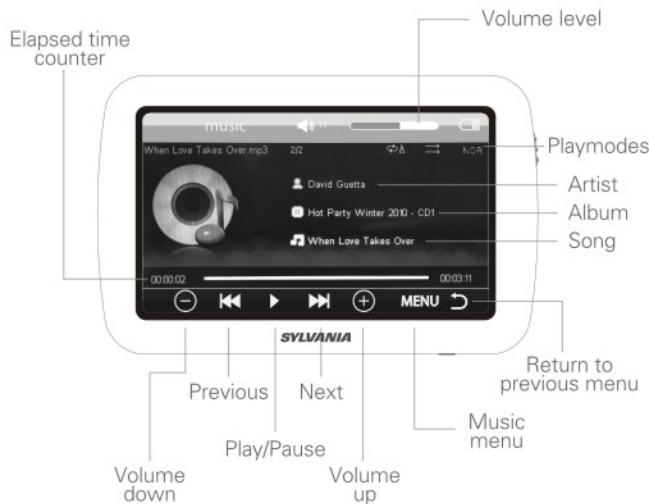


## Adding Favorites

- 1) To add a song to your "Favorites" list, highlight the song from the music list, press **MENU** and select "YES" or "NO".
- 2) To access your favorites list, select Favorites in the main music menu.




1. To view video files, select "video" from the Main Menu.
2. Use the [ ↑ ] or [ ↓ ] button to highlight a video file and touch the highlighted file or double tap the file, the video starts playing.
3. Use the [ ↶ back ] button to go to previous screens or return to the Main Menu.
4. To switch between Normal & Wide screen view, press the [ ⏏ ] button.
5. To delete a video file, highlight the file and press MENU, then select "YES" or "NO".

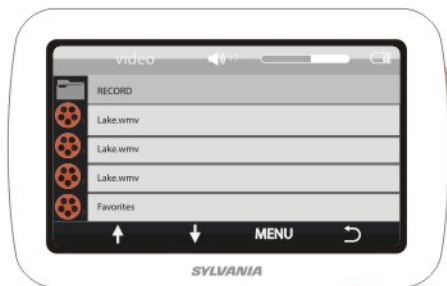

## Video Screen


Elapsed time counter

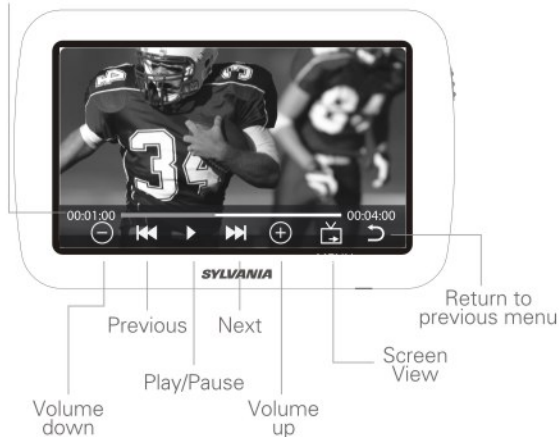

When returning to a video that was not finished playing, the player will ask "Continue Last Play?" Select "NO" to start video from beginning. Select "YES" to start from current spot.

## Photos

1. To view photos, select "photos" from the Main Menu.
2. Use the [←], [↑], [↓], or [→] button to highlight a photo and touch the highlighted photo or double tap the photo to open it.

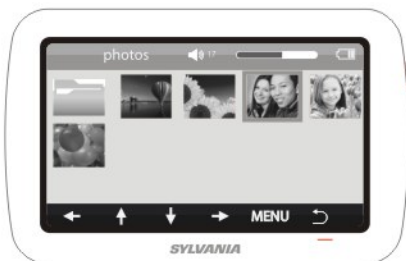


3. Touch the screen to make the photo interface appear or disappear.



4. To delete a photo, highlight the photo and press **15** MENU, then select "YES" or "NO".

## Camera

1. To use the camera, select "camera" from the Main Menu. The **[CAMERA]** button will show on the screen along with the **[CAMERA MODE]** button and the **[RETURN]** button.

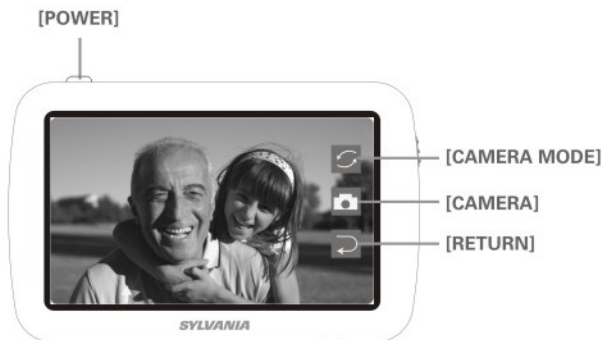

2. To take a picture, press the **[CAMERA]** button **or** quickpress the **[POWER]** button. Your pictures will be saved to the "photos" section in a folder titled "CAMERA".
3. To return to the Main Menu, press the **[RETURN]** button on the screen.

4. To open the camera menu, tap the screen anywhere except the buttons. You can change the camera's settings from the camera menu.


\*\* Press backlight icon to select the ideal brightness for picture recording.



5. To close the camera menu, tap the screen anywhere except the buttons.

## Video recorder

1. To use the video camera, select "camera" from the Main Menu, then press the **[CAMERA MODE]** button. The **[RECORD]** button will show on the screen, along with the **[CAMERA MODE]** button, the **[RETURN]** button.

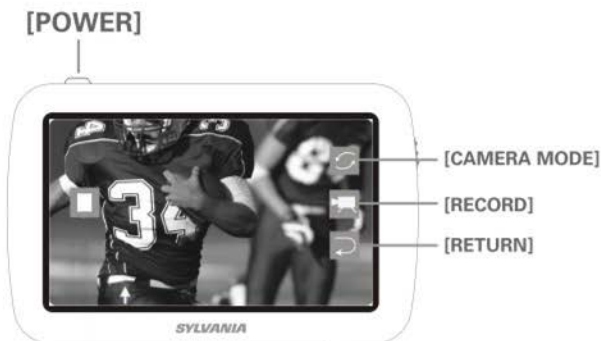

2. To start recording a video, quickpress the **[POWER]** button.
3. To pause the recording, press the **[POWER]** button on the screen.

- To stop recording and save the video, quickpress the **[POWER]** button. Your recorded videos will be saved to the "videos" section in a folder titled "CAMERA".
- To open the record menu, tap the screen anywhere except the buttons. You can change the camera's record settings from the record menu.



Resolution

Zoom

Saturation


Sound

Backlight Effect

- To close the record menu, tap the screen anywhere except the buttons.
- To return to the Main Menu, press the **[RETURN]** button on the screen.

You can view electronic books (e-book), that are in TXT format on the player.

- Select "e-book" from the Main Menu.

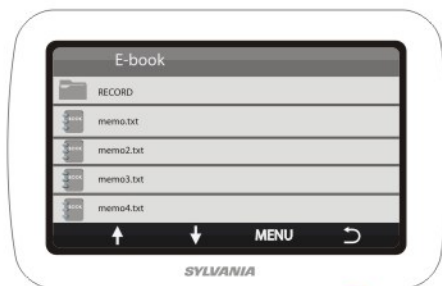

- Use the [ ↑ ] or [ ↓ ] button to highlight a file and touch the highlighted file or double tap the file, the e-book will open.
- Use the [ ↵ back ] button to go to previous screens or return to the Main Menu.
- Press MENU to access the e-book menu at any time while an e-book file is open.



*The player only supports TXT files with "ANSI" coding.*

## Radio

Select "Radio" from the Main Menu, to use Radio by earphone .

### Radio Interface

1. Enter "Radio" interface, the radio frequency is the frequency of the last to exit, if the first entry, the default is 87.5MHz.
2. Automatic mode press the   button to switch channels. If not saved radio channels, it can't be swithed.
3. In manual mode, press the   button to decrease or increase the frequency point

### Submenu Description

In the radio interface, press "MENU" button to enter sub-menu.

1. Search by hand: In the sub-menu, select " search by hand", press the   button to adjust the channel search for the station.
2. Auto Search: In the sub-menu, select "auto search", the system begins to search. After the search, it will automatically save the search to search for the radio and play the first radio channel.
3. Preset mode : Manual search/Automatic search model switching
4. Save Channel: View saved radio stations, to manually save the current frequency of the radio channel.
5. Delete Channel : Delete the saved radio channel.
6. Stereo Switch : Stereo on or off switch
7. Receive Area :  
China : 87.5—108MHZ,  
Japan : 76—91MHZ  
USA : 87.5— 108MHZ  
Europe : 87.5—108MHZ,  
Campus Radio : 76— 108MHZ,
8. FM Record : While listening to the radio into the FM recording can record the radio.

## Record

To record voice memos, select "record" from the Main Menu.




1. Press [●] to start recording a voice memo.
2. Press [||] to pause the recording.
3. Press [●] to continue recording within the same voice memo or press [||] to stop recording and save the voice memo.
4. To stop recording and save the voice memo, press [➤] at any time while recording. Press [➤] again to return to the previous menu.
5. Quick press the [POWER] button at any time to return to the main menu.




To access recorded voice memos, select "music" from the main menu, scroll to "Voice Memos" and select the voice memo you would like to play.

# Explorer

To view or delete files on the player or Micro SD card (if inserted), select "Explorer" from the Main Menu.

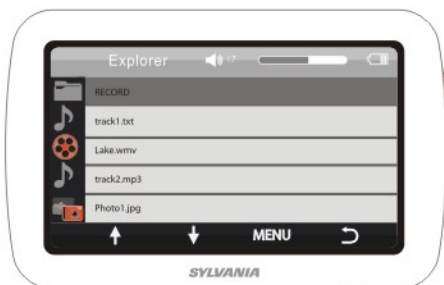


If a Micro SD card is inserted in the player, the following screen appears - select "SD Card" to access it.

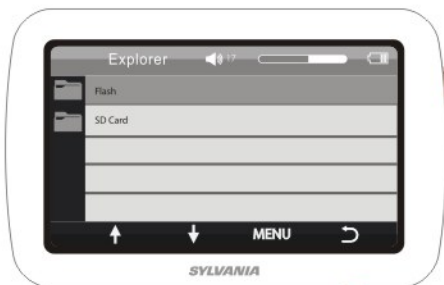

Use the [ ↑ ] or [ ↓ ] button to Explorer files, and tap a highlight file to open it.

## Deleting files on the player or SD card

To delete a file from the Explorer screen, use the [ ↑ ] or [ ↓ ] button to highlight a file, and press **MENU**.

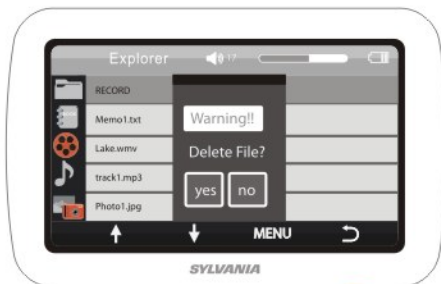


On the "Delete File?" screen that appears select "YES" to delete the selected file and return to the Explorer screen.

Select "NO" to return to the Explorer Screen.

# Settings

In the settings menu you can customize various player settings, such as: language, display settings and more.

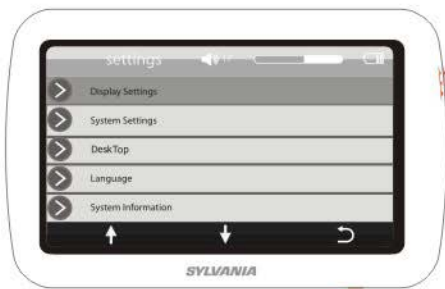

To access the system settings where you can make changes to the player, select "settings" from the Main Menu.

Use the [↑] or [↓] button to highlight a setting menu and touch the highlighted file or double tap the file, the settings menu will open.



*Adjust the "Display Settings" and "AutoShut Time" to extend and optimize battery performance.*

The settings menu screen includes:

## **Display Settings:**

Change the backlight duration time and screen brightness.

## **System Settings:**

Set player to factory default settings and touch screen calibration.

## **DeskTop:**

Select from seven different backgrounds for the Main Menu.

## **Language:**

Select player language.

## **System Information:**

View device information.

## **AutoShut Time:**

Select duration of time of inactivity that the player will shut itself down.



## Can not power on

- The battery may be exhausted, please recharge the battery.

## Files can not be transferred to the player

- Check if the driver is installed correctly in the computer by disconnecting and then reconnecting the player to the computer
- Check the connection between the player and PC, and confirm the USB cable is properly connected.

## No sound from the headphones

- Please ensure the volume is turned up, and the headphones are properly connected.
- Check if the format of music file is supported by the player.

## Can not record

- Check if there is enough memory and battery capacity.

## Display is in the wrong language

- Please ensure you selected the correct language from the "Settings" menu.

## I cannot display my .jpg files

- Many digital cameras and image editing softwares add hidden data to the .jpg files. This data can prevent the player from loading the images. Try to eliminate them by saving the file with another name.

## Resetting the player

If the player malfunctions, you can use the reset function to restart it.

- To reset the player, take a metal pin (such as the end of a paperclip), and push it into the RESET hole to restart the player. Be careful not to insert the pin into the microphone.

## Pictures are blurry / fuzzy

- Open the camera menu (see "camera") and change the camera's settings

|                     |                                                                      |
|---------------------|----------------------------------------------------------------------|
| Screen              | 4.3" touch screen                                                    |
| Languages Supported | Multiple languages                                                   |
| Data Speed          | high speed                                                           |
| File Format         | Music: MP3/WMA/FLAC/APE/OGG/ACC<br>Record: WAV<br>Photo: JPG/BMP/JIF |
| Video Format        | AVI/RMVB/ RM/MP4/DAT/VOB                                             |
| SNR                 | 85dB                                                                 |
| Flash Memory        | Built-in 4GB flash memory                                            |
| Power Supply        | 3.7V polymer Lithium battery                                         |
| Working Temperature | 5°C to 40°C                                                          |
| System Supported    | Windows SE/ME/2000/XP/2007 etc.                                      |
| Dimensions          | 125X78X10MM                                                          |
| Weight              | 124.5g                                                               |